


BMW K1600GT SPLASH GUARD INSTALLATION

Designed to fit all K 1600 GT / GTL / Exclusive Models

Important:

Read ALL instructions carefully before beginning installation.

1. Left side Splash Guard assembly with **3M Dual Lock™** adhesive.
2. Right side Splash Guard assembly with accessory socket, accessory straight plug and **3M Dual Lock™** adhesive.

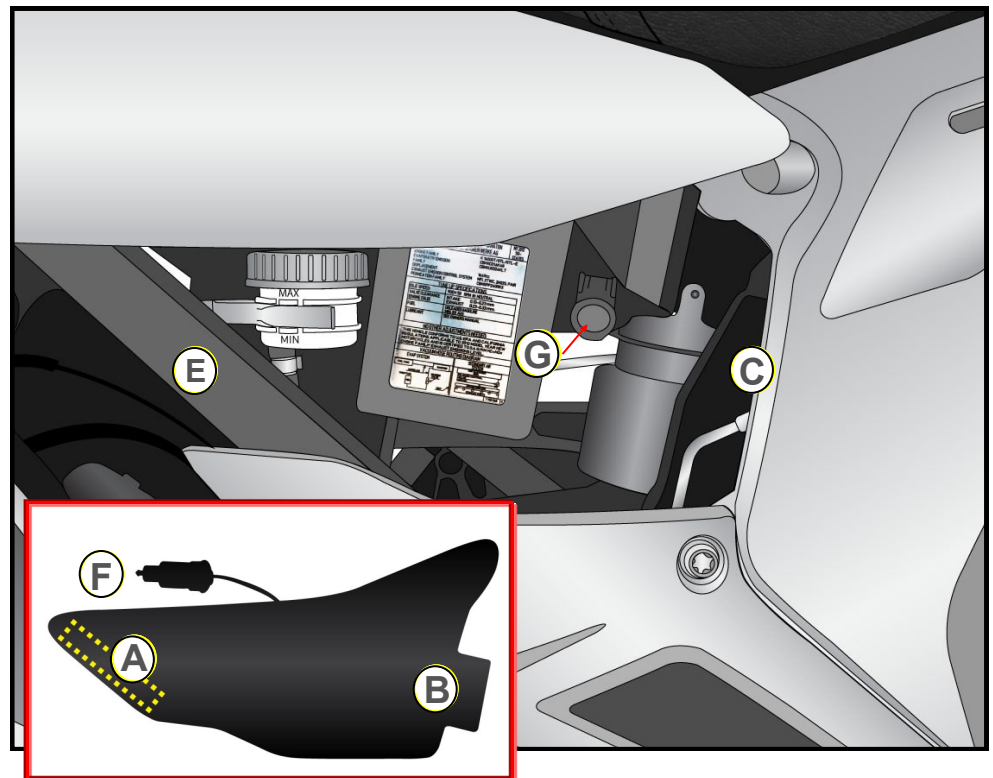

Preparation:

Clean frame surface(s) **E** with rubbing alcohol. “Dry fit” the panels first by performing the installation operation (steps 2 and 3 below).

Important: Leave the **3M Dual Lock™** adhesive strip protector in place for this “dry fit” test.

Installation:

1. Remove adhesive protective strip from **3M Dual Lock™** located on back of Splash Guard panel (location **A**).
2. Tuck Tab **B** under motorcycle frame member **C**.
3. For right side installation, first plug accessory jack extension pigtail **F** into motorcycle accessory jack **G**. Press Tab **A** onto frame member **E**.

NOTE: To remove or reposition the panels, gently release the **3M Dual Lock™** connection on surfaces **E** and **A**.