

BMW TOPCASE PAD BR-2065

INSTALLATION INSTRUCTIONS AND TEMPLATE FOR USE WITH ORIGINAL BMW 28-LITER TOP CASE

1. Cut the template out and position it on the Top Case's molded backrest feature.

5. Enjoy! Your new backrest is constructed of high-quality, outdoor-treated materials that are mildew resistant and U.V. Stabilized. Clean with mild soap and a soft cloth.

2. Once you are certain that the template is centered, mark the hole locations on the Top Case. Note: It may be helpful to secure the template with tape before marking.

4. Install the fasteners provided through the Top Case's lid and into the threaded holes on the backrest. Use the washers provided in the order shown. (See fig1).

3. Drill four 1/4" holes at the specified locations.

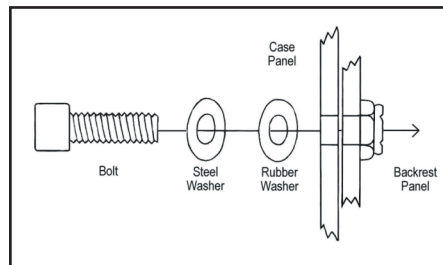


Figure 1



SARGENT[®]
CYCLE PRODUCTS, N.A.

QUESTIONS?

CALL 1-800-749-7328 M-F 8:00 TO 5:00 EASTERN TIME

PART # BR-2065